



Trimble GPSCorrect




Initial Configuration

For more information about GPSCorrect go to →
<http://trl.trimble.com/docushare/dsweb/Get/Document-478233/GPSCorrectGettingStartedGuide.pdf>

GPSCorrect – Toolbar Access

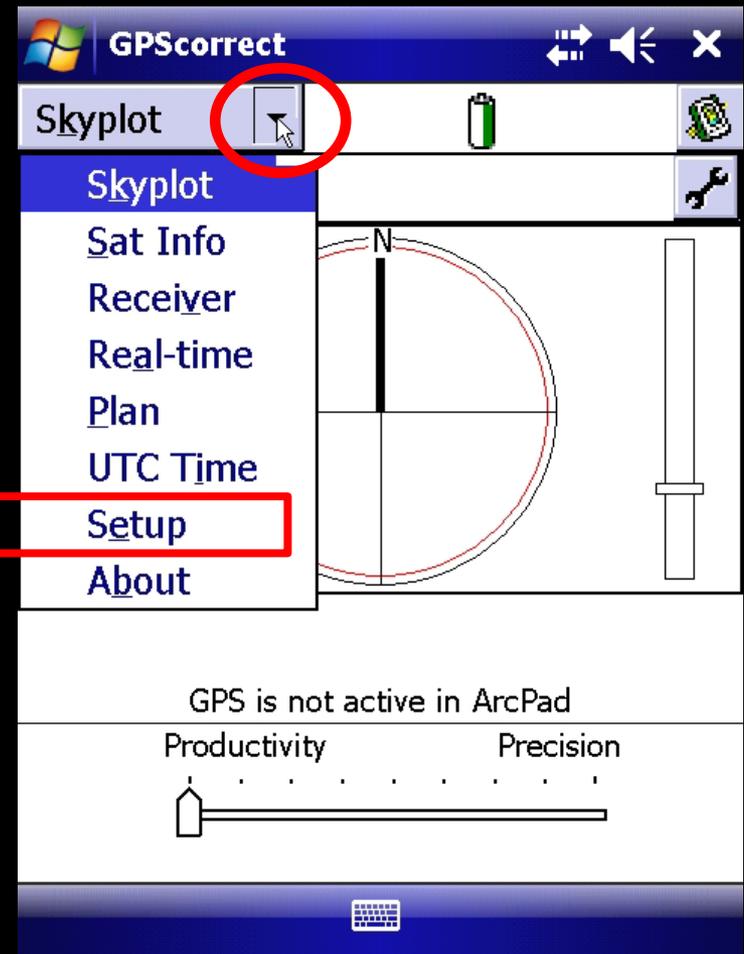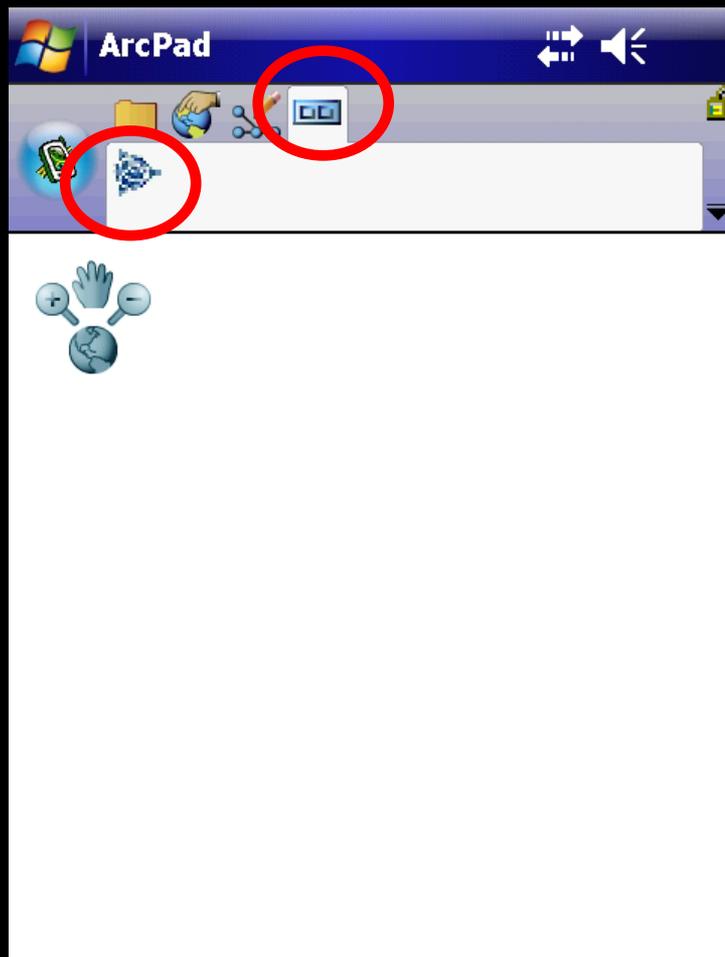


GPSCorrect – Logging Settings

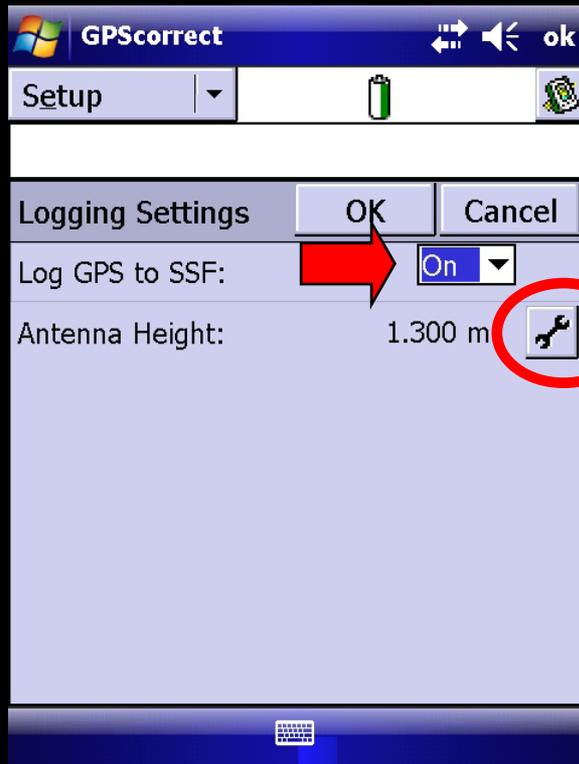

Logging
Settings


Antenna Height is
set in ArcPad's
GPS Preferences

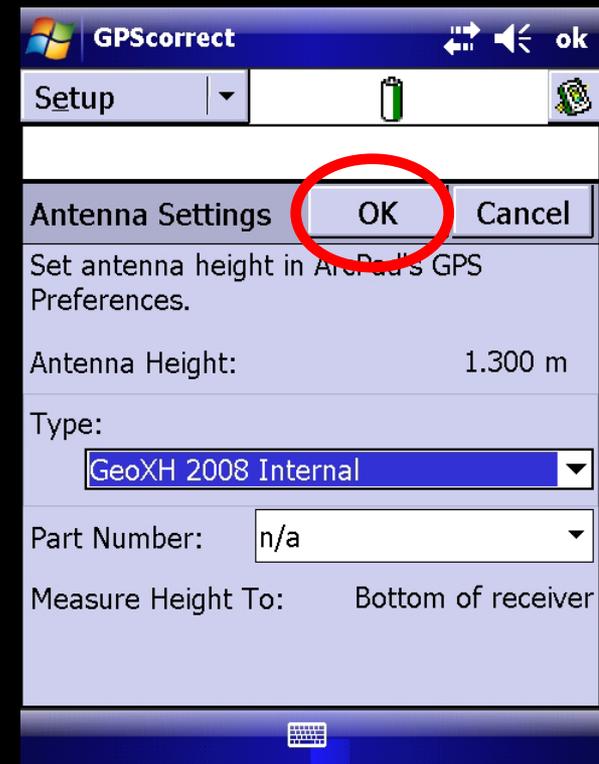


Set the Antenna
Type to your device

GPSCorrect – GPS Settings

GPS Settings

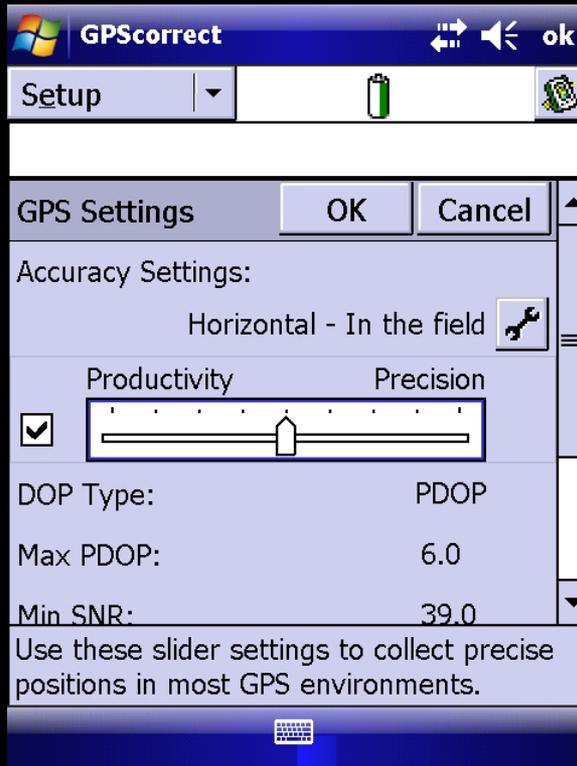


Scroll the slide bar all the way to the left if working in a forest

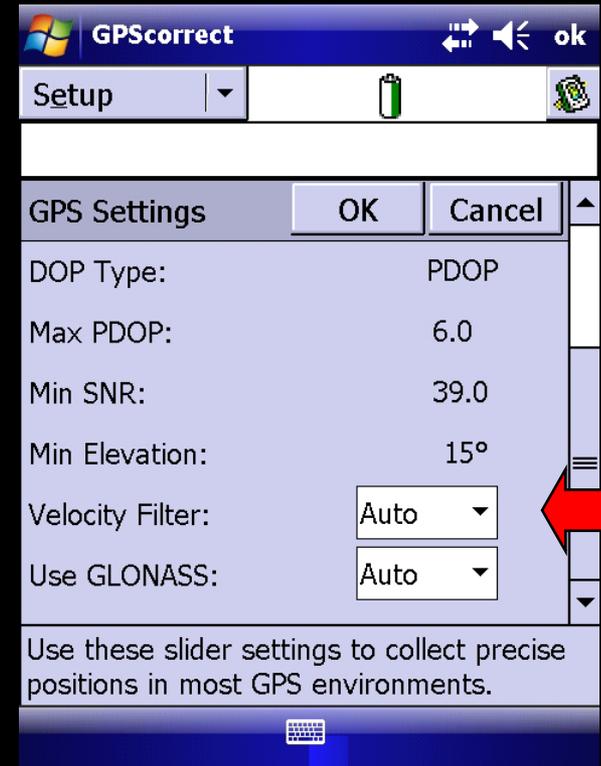

Scroll down to set the Velocity Filter to Auto

GPSCorrect – GPS Settings

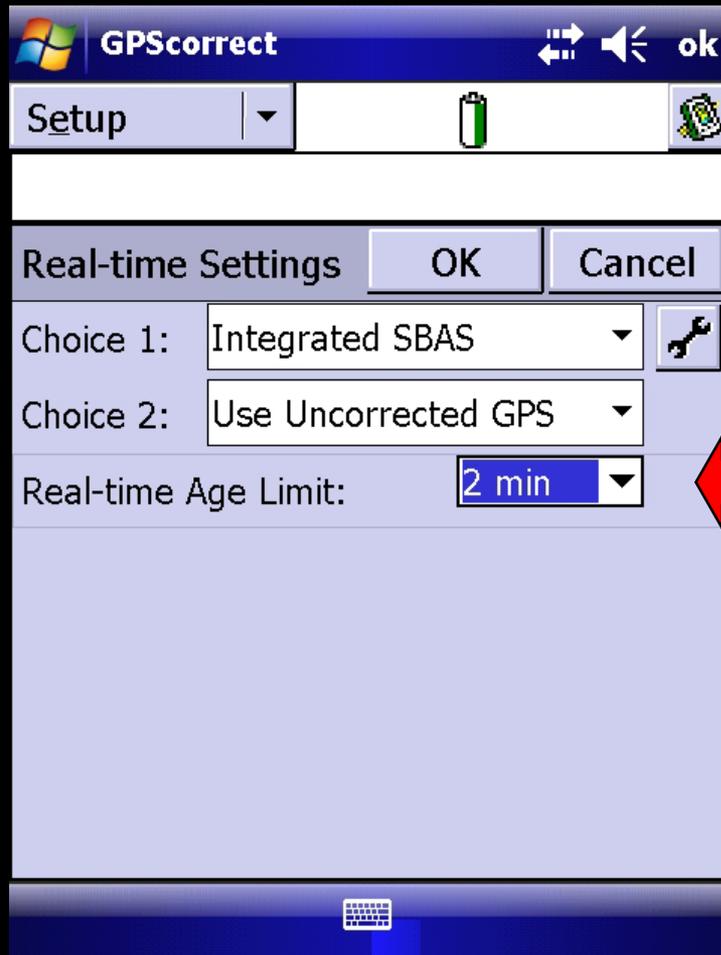

Real-time
Settings



Scroll down to set the
Velocity Filter to Auto